


快煮壺使用說明

Instructions for use of instant pot

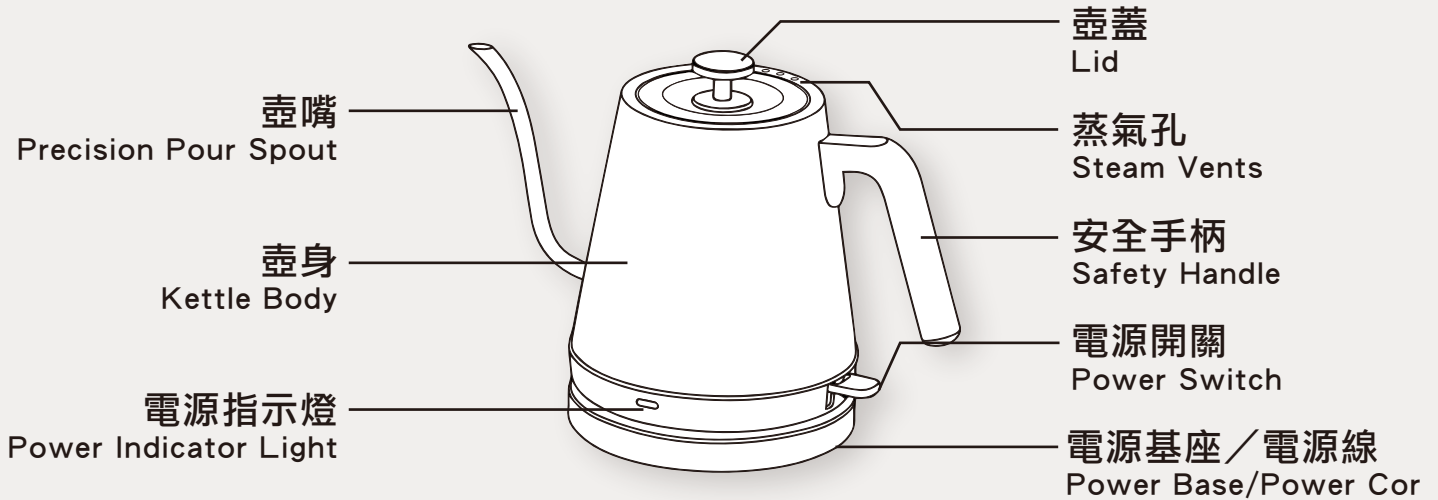

注意事項：

1. 使用前須將電源線插頭插在110V的交流電源插座上，按下電源開關，電源指示燈亮橘燈，快煮壺開始加熱。
2. 操作時，請握住安全手柄，勿用手觸摸從壺嘴或蒸氣孔噴出的水蒸氣。煮水時須蓋上壺蓋，煮水過程中不可打開壺蓋，以免燙傷或因壺蓋未關閉而導致溫控器不能自動斷電。
3. 裝水請勿超過最高水位標示，否則熱水溢出會導致燙傷。
4. 此產品為流線型出水設計之細口壺嘴，若不慎摔落或使用不當，易使壺嘴變形或歪斜，影響出水效果。
5. 長時間不使用或外出時，請務必拔掉電源線插頭，並將電源線儲存於電源基座的凹槽中。
6. 下列情況必須確保電源已關閉：壺中無水、加水時、不使用時，清潔或自基座移開前、快煮壺出現未提時，務必確定電源開關已關閉。
7. 快煮壺應和電源基座配套使用，嚴禁使用其他電源基座。
8. 請將快煮壺移離電源基座再做加水動作，放置到電源基座前必須將壺體表面與底部擦乾。
9. 快煮壺外殼噴漆經長期高溫烹煮可能會有變色的情形，此為正常現象。

RELATED TO USE

- Place the kettle on a dry, flat, stable surface away from the edge of counter to prevent accidental tipping.
- Do not place the kettle (including the base) on or near heat sources such as stovetops, ovens, radiators, etc.
- Do not operate dry or below the "MIN" line. Dry boiling the kettle may result in permanent damage and potential fire.
- Do not fill the kettle above the "MAX" line. This may cause water to boil over and may cause scalding.
- To disconnect, use the On/Off Switch to turn the kettle off, then remove the plug from the wall outlet.
- Always unplug before moving, cleaning or whenever not in use. Allow to cool before putting on or taking off parts and before cleaning the appliance.

TO PREVENT SCALDING

- Do not touch hot surface. Use handle. Do not touch the heated parts of the base or the walls of the kettle during or immediately after operation.
- Always handle with care when there is hot water inside the kettle.
- Make sure the lid is securely closed while the kettle is operating. Do not cover the spout opening while the kettle is in use. Do not cover the openings on the lid.
- Be aware of steam being emitted from spout or lid especially during refilling.

ELECTRICITY SAFETY

- To avoid fire or shock hazard, plug the appliance into a right AC electrical outlet. Make sure the voltage indicated on the label of the appliance is the same as your local supply.
- Do not use extension cord. Using accessory attachments not recommended by the manufacturer may result in fire, electric shock, or injury.
- To avoid an electrical overload, do not operate another high-wattage appliance on the same circuit.
- Use the included power base only.
- Do not use the kettle if it is malfunctioning, or if any part, including the base, cord, or plug, is damaged in any manner.
- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- Do not let the power cord hang over the edge of a table or counter. Do not allow the cord to touch hot surfaces.
- Never try to repair the unit by yourself. Send it to the nearest authorized maintenance center for repair.